
OLDE TOWNE

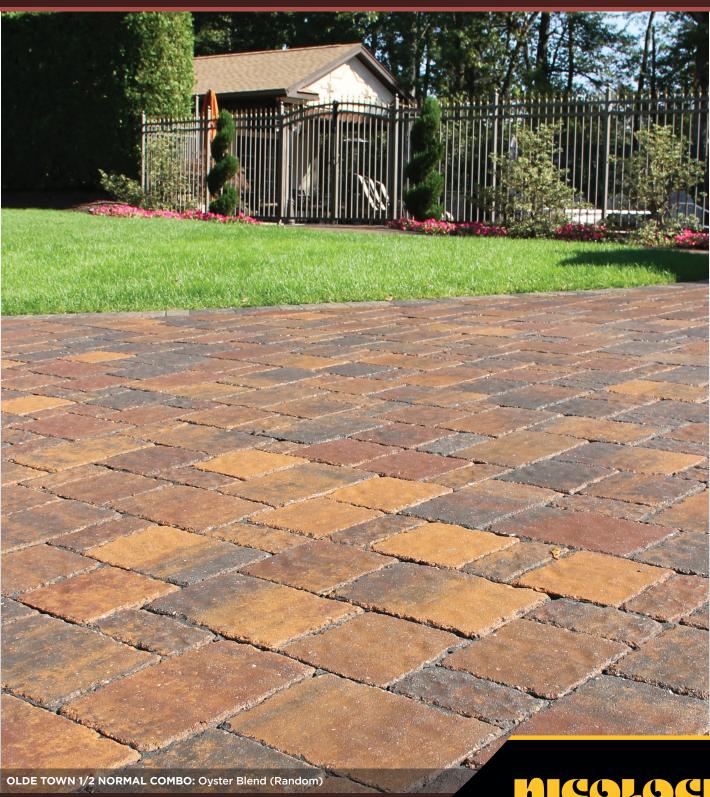



LIVE LIFE IN COLOR!

paving stones & retaining walls

paver-shield™

DETOWNE



FEATURES

Multi-size rectangular shapes
 Textured edges
 No spacer lugs




| SPECIFICATIONS | | | | | | | |
|----------------|--------|---------|-----------|--------------|-------------|-------------|-------------|
| | width | length | thickness | s.f./per pc. | s.f./pallet | pcs./pallet | lbs./pallet |
| Α | 4-3/4" | 9-1/2" | 2-3/4" | 3.2 | 111 | 360 | 3,630 |
| В | 9-1/2" | 9-1/2" | 2-3/4" | 1.6 | 111 | 72 | 3,630 |
| С | 9-1/2" | 14-3/8" | 2-3/4" | 1.1 | | 72 | |

INSTALLATION GUIDELINES: SAND

After excavation, compact the subgrade and install a woven separation fabric. Spread and compact a base of clean, graded, dense aggregate (road base). Typical compacted base thickness is 4-6" for pedestrian applications. Pavers are set on a loosely screeded 1" bed of graded, clean concrete sand. Maintain a joint size of 1/16" – 3/16". When pavers are set, compact paving stones into sand with mechanical plate vibrator. Joint sand may be spread over paving stones during compaction. Installed pavers should be set 1/8" to 1/4" above final elevations to compensate for any potential settlement. Spread clean dry sand over surface and broom sweep to fill joints.

CROSS-SECTION OF TYPICAL INSTALLATION

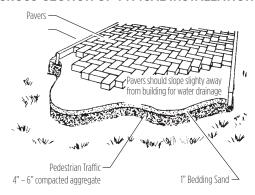

NOTE: All measurements are nominal. Variance in square footage or linear footage coverage can be up to 5% depending on joint width. The possible occurrence of efflorescence does not affect the structural integrity of the product. Efflorescence is a normal occurrence in concrete products and will dissipate with normal weathering. The use of concrete as a base or setting bed may increase the possibility of efflorescence.

CAUTION: Always use a plate compactor with a pad when installing any textured paving stone.

COLOR



adobe blend antiqued



granite city blend antiqued



crab orchard blend antiqued*















📻 in 🏙 🧚 😰 🗑 | nicolock.com

